



GlassOuse

Assistive Device

www.glassouse.com

GlassOuse with Bluetooth and 9 axis (KF-1M)

SIMPLE USER MANUAL

1. Bluetooth Connection

- a. Activate your tablet's Bluetooth connection of your tablet or other device (except iOS systems)
- b. Press the "Connect" button. The LED light will start to flash.
- c. Find and link to the "CEBA GlassOuse" device using your tablet's Bluetooth scan screen.
- d. If the link is successful, the LED will flash blue continuously. If the LED does not flash, the device is in "sleep" mode. If there has been a connection before, press the "Click" button and try to connect again.
- e. To use with another devices, erase "GlassOuse" from your tablet or turn off your tablet's Bluetooth functionality.

2. Mouse Use

After you put Glassouse on your head, the cursor moves according to your head movements. When your head is in a centered and comfortable position, the cursor should be in the middle of the screen. To move the cursor left or right, move your head from side to side. You use same method to slide the cursor up and down.

3. Setting Mouse Sensitivity

II. You can set the sensitivity in two ways:

3.1 Navigate to the tablet's "Menu → Settings → Controls → Language and Access → Mouse/trackpad → Marking speed" and set the desired cursor speed.

3.2 Using the GlassOuse unit:

- a. Press the "Click" and "Reset" buttons at the same time.
- b. First, release the "Reset" button. After that, release the "Click" button. The LED should begin to flash red.
- c. Select the desired pointer speed (slow, medium, or fast) by pressing the "Click" button according to the speed of the red LED light. On the "slow" setting, the LED will flash slowly. On the "medium" setting, it will flash faster, and on the "fast" setting, it will flash the fastest.
- d. After making your choice, press "Reset" and activate GlassOuse.

1. The "Click" Button

The "Click" button is made of a certified waterproof material. There is no cancerogenic material inside, and it does not carry any health risks. The "Click" button

can easily be set to an appropriate angle for your mouth with the flexible cable after you put GlassOuse on your head. The “Click” function is used by biting or pressing with the lips.

This button has been tested 50,000 times under 3 tons. The additional rubber case inside the package is intended for a second user or for replacement after extensive use. To wash and disinfect the outer rubber case, first separate it from the product and ensure that it is dry before reconnecting.

2. LED Indication

Charging: Red LED is seen continuously on the device (Charger adapter light is red)

Charging is complete: No LED light on the device (Charger adaptor light is green)

Bluetooth is searching for a connection: The LED flashes blue

Bluetooth connection is active: The LED is continuously blue

Low Battery: The LED flashes red

3. Operating System Compatibility

- PC (Windows, Linux, Mac)
- Tablet (Android, Windows)

- Mobile (Android, Windows)

4. Sleep mode

To extend battery life and not disturb you while you are watching films or listening to music, GlassOuse enter “Sleep” mode if the “Click” is not pressed for 3 minutes.

5. Reset to Factory Settings

If GlassOuse does not respond properly, the battery indicator does not work accurately, or you encounter a similar problem, you can press “Reset” to return the device to factory settings. Pressing it for 1 second is enough.

6. Calibration

If the cursor moves abnormally (e.g. vibration, sliding), calibration is recommended.

Calibration is also advisable before first use. It should take a maximum of three minutes to complete the entire process. To calibrate GlassOuse:

- a. Make the Bluetooth connection with your tablet. Press the “Reset” button.
- b. Put GlassOuse on a flat, steady table. The “Click” cable should be in a suspended position.
- c. During calibration, the LED will alternate between blue and red for about 1 second at a time. When the red colour is sustained, the calibration is completed, and you can start using the device.

7. Battery

A 330mAh 3.7v Li-Po CEBA cell is used for GlassOuse. This cell provides nearly 15 hours of use. Charge the cell fully before first use.

8. Angle of Use

CEBA GlassOuse can be used in a 180° horizontal or 160° vertical angle.

Please do not use it while reclining fully or looking at the ground.

9. Warnings

- a. Keep CEBA GlassOuse away from magnets.
- b. Don't fold and flex CEBA GlassOuse.
- c. CEBA GlassOuse was designed for disabled citizens; do not use it for other purposes.
- d. As the CEBA GlassOuse "Click" button is used in direct contact with the mouth, keep it in an appropriate and safe place.
- e. When you want to clean or wash it, separate the rubber case from the GlassOuse device. After that, dry it. Never use it on "GlassOuse" if it is wet or damp.
- f. Do not use the product unless the waterproof coating is fully intact, with no holes or tears.
- g. Use the CEBA GlassOuse charger only for this product.
- h. Users who cannot use their hands should be fully instructed in device operation.
- i. Do not bite mouthpiece hard; teeth can penetrate the coating if excessive force is used.
- j. Before the first use, charge and calibrate the device.

10. Button names

